Print on Plain White Paper (Part No. 122919)

INSTALLATION INSTRUCTIONS FOR VISION BLOCK P/N (9A94001) USED ON PODIATRY TABLES #414, 416 & 417

1. Position chair: full tilt position, base fully extended.
2. Disconnect the table's electrical supply cord to prevent electrical shock. Failure to do so could result in personal injury or equipment damage.
3. Using Fig. #1 locate slotted tube. Slide vision tube weldment up through slotted tube as shown in Fig. #2.
4. Secure vision tube weldment in place using the nut and washer supplied.
5. Position vision block tube and screen as in Fig. #2. (NOTE: Assembly can be rotated 90° or 180°).

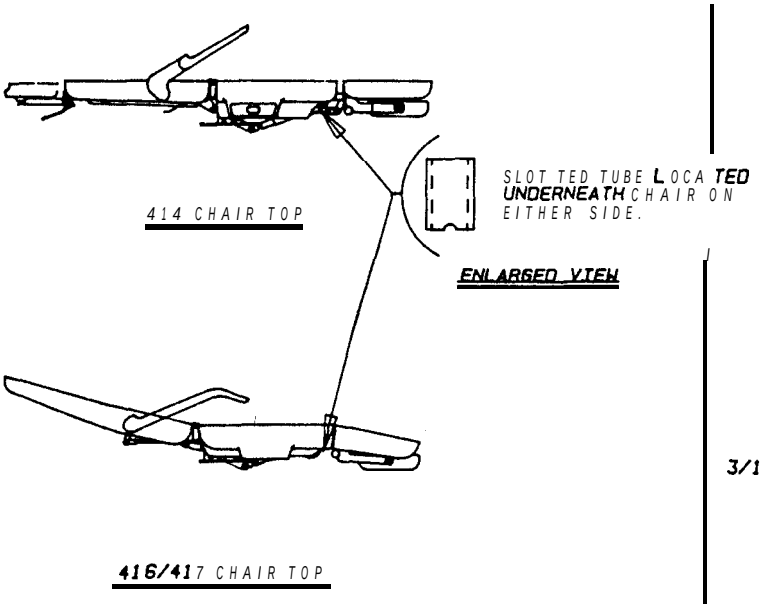

FIG. 1

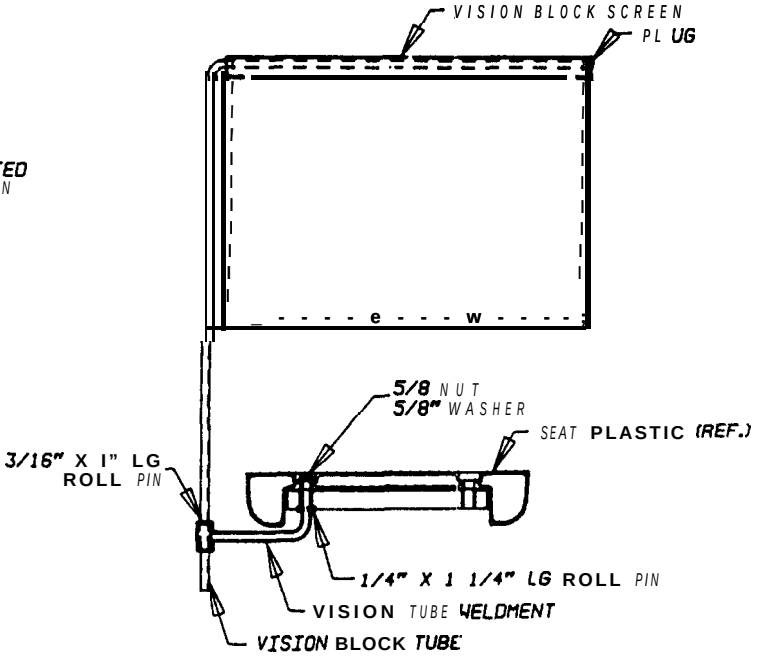

FIG. 2

MIDMARK CORPORATION
VERSAILLES, OHIO 45380 937-526-3662
ALL PRODUCTS SUBJECT TO IMPROVEMENT CHANGES WITHOUT NOTICE!

003-0485-00 REV. B